



Flat-Flex® XT® Conveyor Belt

Drive Component Setup

With Flat-Flex® XT® conveyor belt, setting up your drive and idler shaft is fast and simple.

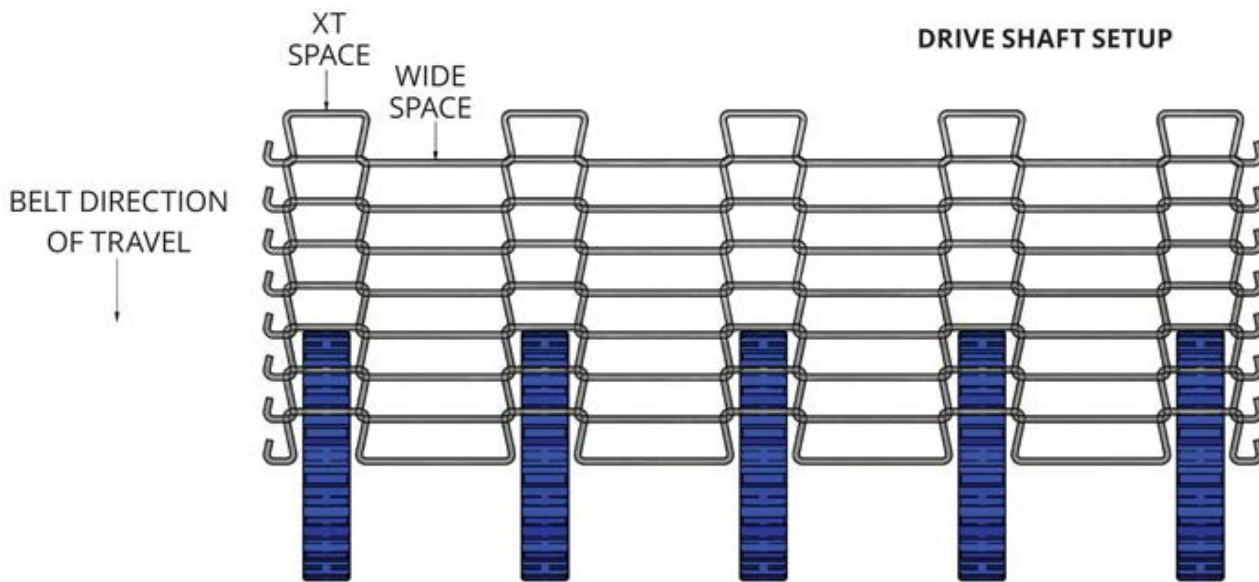

To setup the drive shaft, install one drive sprocket per XT space along the full width of the drive shaft (figure above).

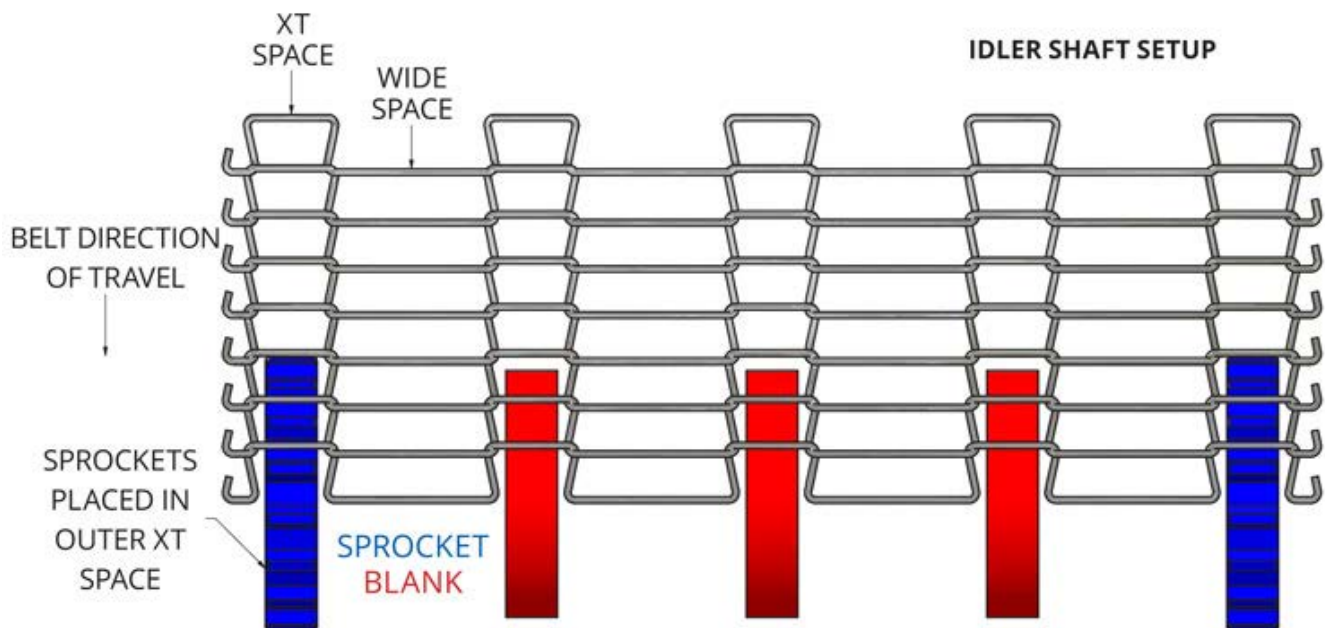

In setting up the idler shaft, install one drive sprocket per outside XT space of your belt (figure above). Then, install one blank on each of the inside XT spaces across the width of the belt. Make sure to fully secure each component along the shafts.

Make sure to fully secure each component along the shafts and align all sprocket teeth.