wirebelt®

THE TRUSTED METAL CONVEYOR BELT MANUFACTURER™

WIRE STRAIGHTENER

THE PROVEN CONVEYOR BELT TECHNOLOGY

Instructions For Use

WWW.WIREBELT.CO.UK

The **Wire Straightener** has been designed for use with Flat-Flex® belts.
The three ends of the tool have been machined with slots that accommodate the various wire diameters available.

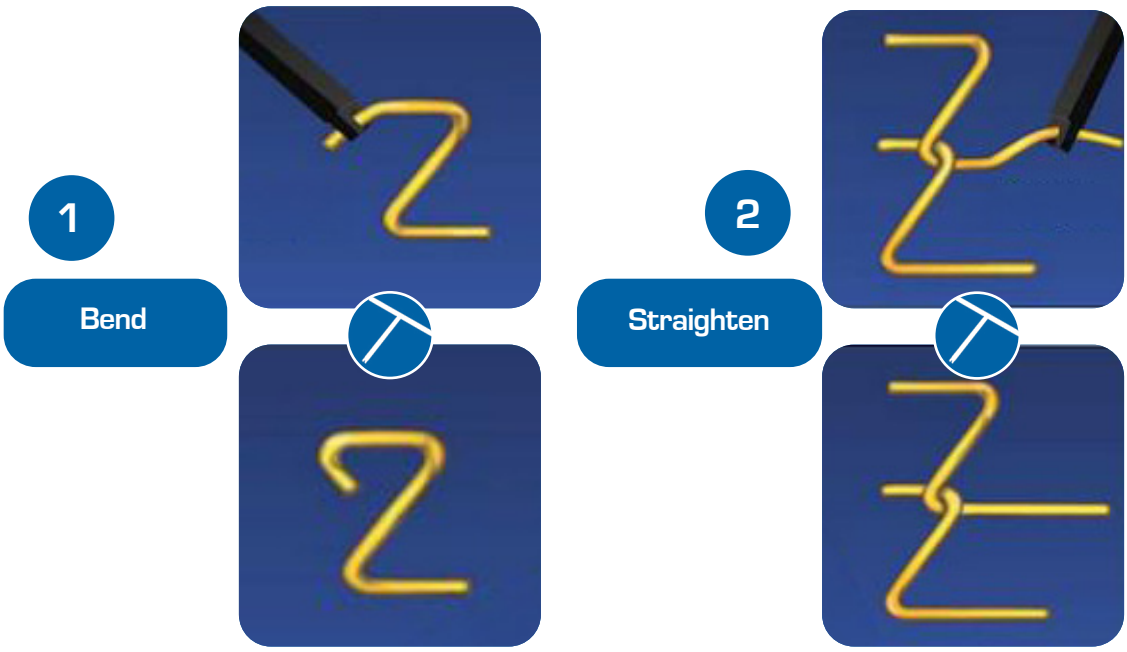

- Fully engage the wire strands into the smallest slot that fits the wire.
- Gently twist the tool back and forth to straighten and reform the strand.
- Slide the tool across the strand and continue straightening by twisting the tool.
- Use the machined end to return any deformed Z-bends to the proper angle.
- On the more difficult strands, you may want to use two tools together.

Straightening the wire strands both during splicing and as part of your regular maintenance checks at the beginning and end of each shift is vitally important. Bent strands can easily get caught on support rods and wear strips, or get tangled with adjacent belts.

Phone
+44 (0)1795 421771

Email
sales@wirebelt.co.uk

Wire Belt Company Limited,
Castle Road, Eurolink Industrial Centre,
Sittingbourne, Kent, ME10 3RF
Registered in England No. 716510

wirebelt®

www.wirebelt.co.uk